


10 To get a vanishing perspective PLANE of the wall, draw lines from the top and bottom of the TH line in ELEVATION VIEW through the appropriate VPR or VPL.

11 This is a plane which contains the wall from the picture plane to infinity. We need to cut off the required starting and ending of our perspective "wall".

a) In PLAN VIEW, draw lines through E and through the front and rear corners of 1 wall only until they meet the Picture Plane wherever it is located.

*ADVICE: draw 1 wall or 1 object at a time as the forest of diverging lines on plan that eventuate will get confusing and cause errors.*

b) Project these intersections vertically to cut off the front and rear ends of the wall in our Perspective Plane drawn in 10 above.

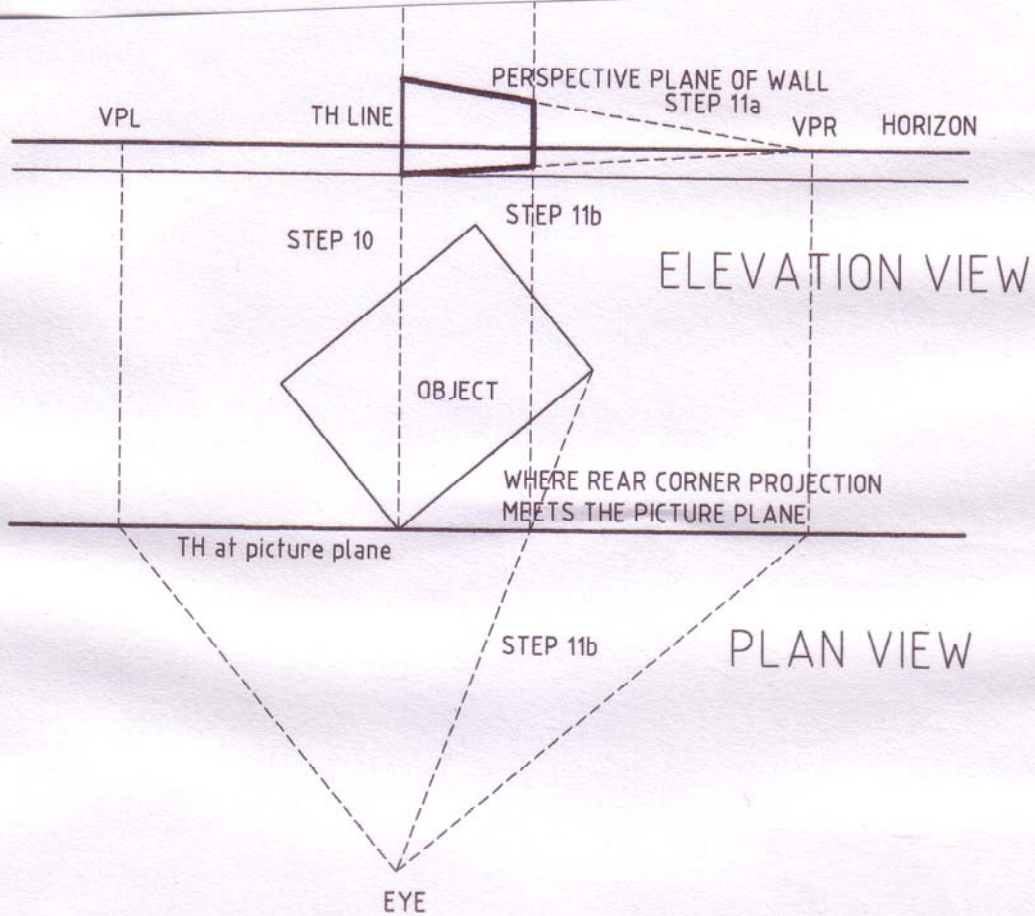

12 Repeat these steps for the other walls and smaller details ie windows within these walls.

Alan Linklater..teacher